Aluminum underbody protection assembly instructions
ZYGO brand for the Loncin X-Wolf 1000 quad

Remove all original plastic covers under the vehicle, including the front plastic element located under the winch on the frame bend. We also recommend rethreading all original threads left on the covers you'll be using for installation. This will make screwing the covers on easier and reduce the risk of damaging the threads.

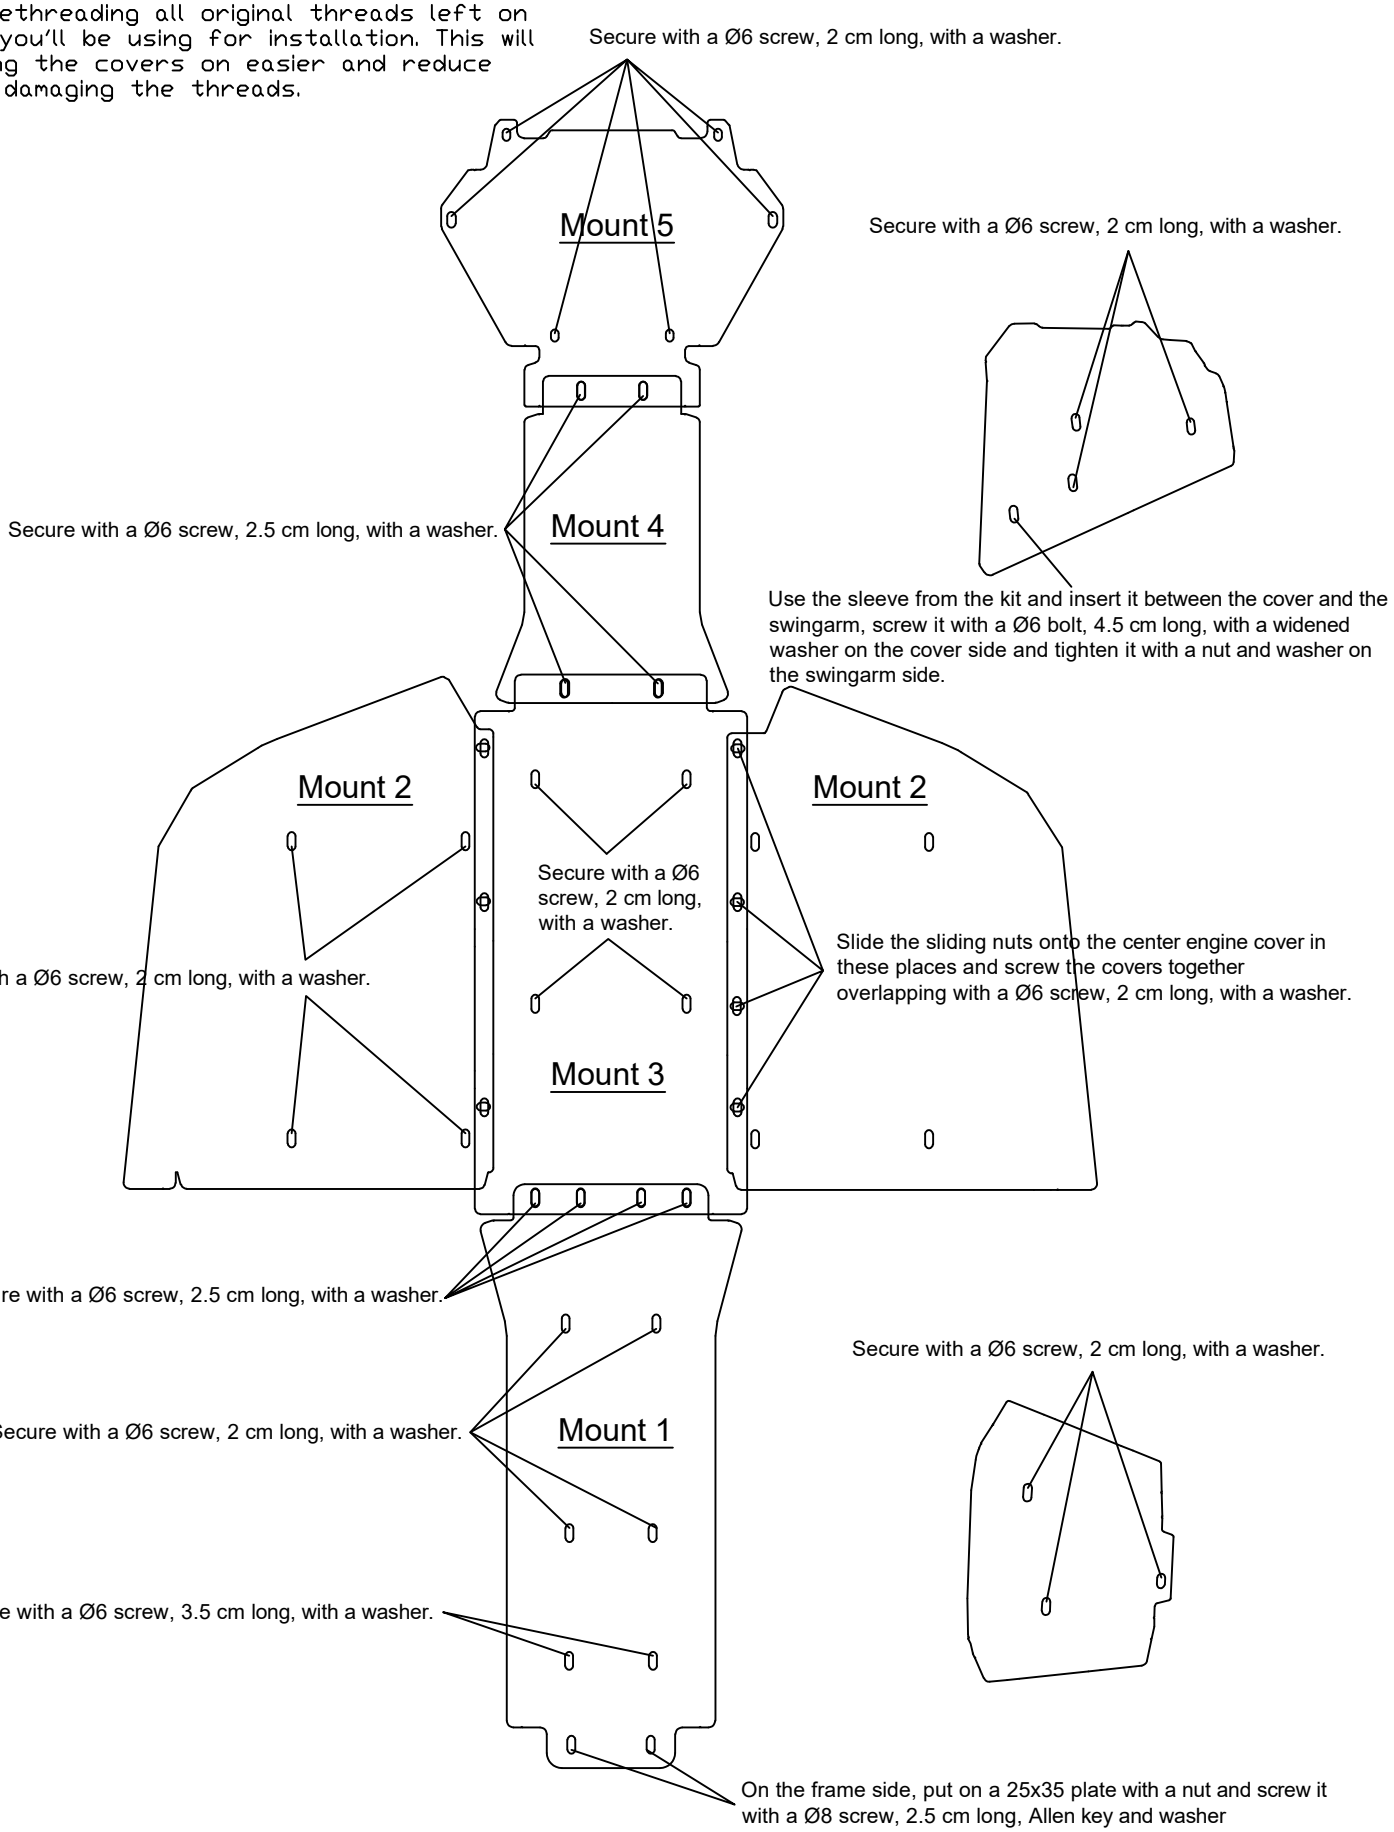

The number of clamps and screws depends on the number of holes shown in the drawing. Tighten all screws and nuts only after the covers are fully installed and aligned with the frame.

More information is available at: www.zygo.com.pl